

Manuale d'uso - Efficienza Energetica / User Manual - Energy Efficiency / Manuel de l'utilisateur - L'efficacité énergétique / Handbuch - Energieeffizienz / Handboek - Energie-efficiëntie Manual - Eficiencia Energética / Manual - Eficiência Energética / Manuel - Energieeffektivitet / Manuall - Energieeffektivitet / Manuaalinen - Energy Efficiency / Manual - Energieeffektivitet Руководство - Энергоэффективность / Käsiiraamat - Energiatõhusus / Rokasgrāmata - Energoefektivitātes

Table with 18 columns (PF, IT, EN, FR, DE, NL, ES, PT, SV, NO, FI, DK, RU, ET, LV) and multiple rows listing technical specifications for FABER hoods like AEChood, EEChood, FDEChood, LE, LEC, GFE, GFEC, SPEmin, SPEmax, SPEboost, PO, Ps, EElhood, Qbep, Pbeq, Qmax, Wbep, WI, Emiddle, Lwa. Includes energy efficiency classes (AEC, EEC, FDEC, LE, LEC, GFE, GFEC), airflow rates (Qmin, Qmax, Qboost), sound power levels (SPEmin, SPEmax, SPEboost), and power consumption (PF, Ps, PI). Also contains safety and maintenance instructions in multiple languages.

